


SOP for enabling the Smart Schedule function on XHUB


1. The first step

At the target power station, click on "Intelligence" to enter this section.

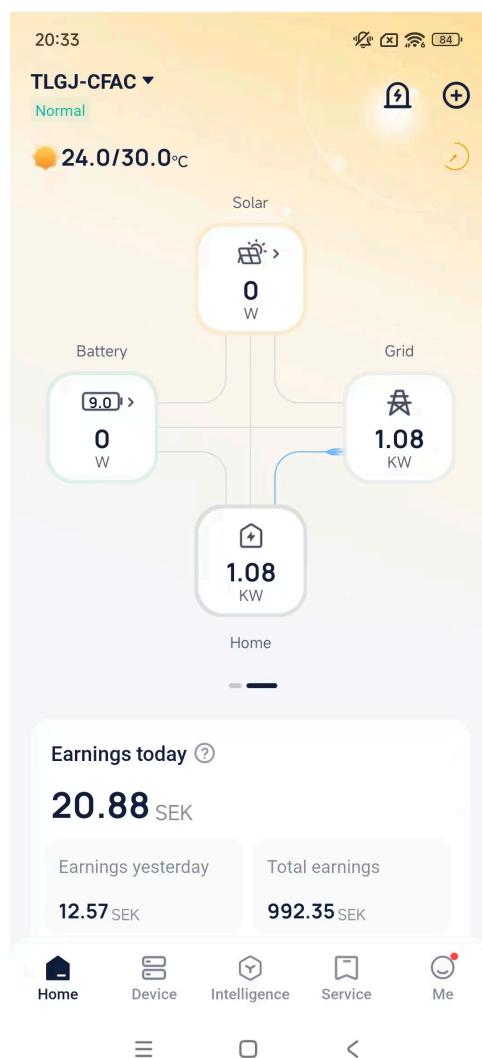


2. The second step

You can see that the status of SmartSchedule is Configurable click on "Smart Schedule "

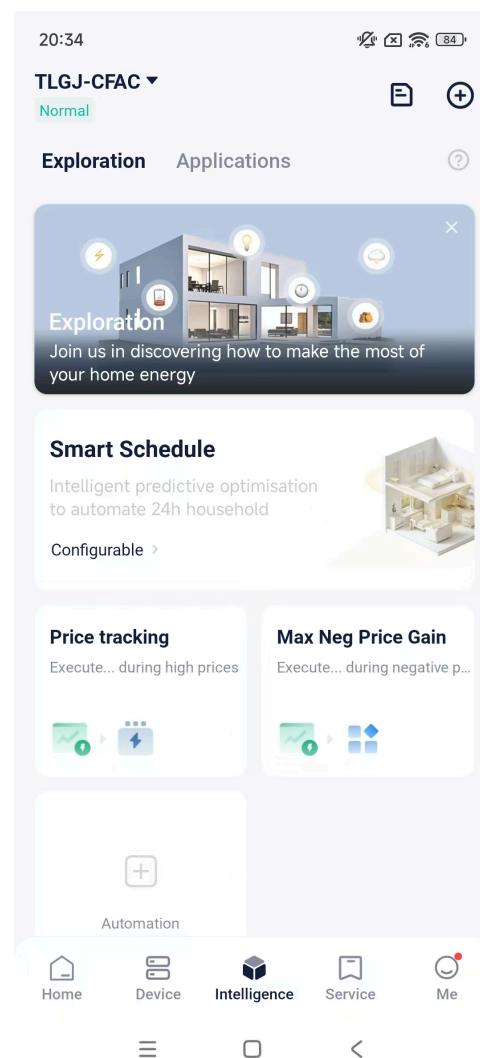

3. The third step

Slide down until the "Enable" button is displayed. Click it.

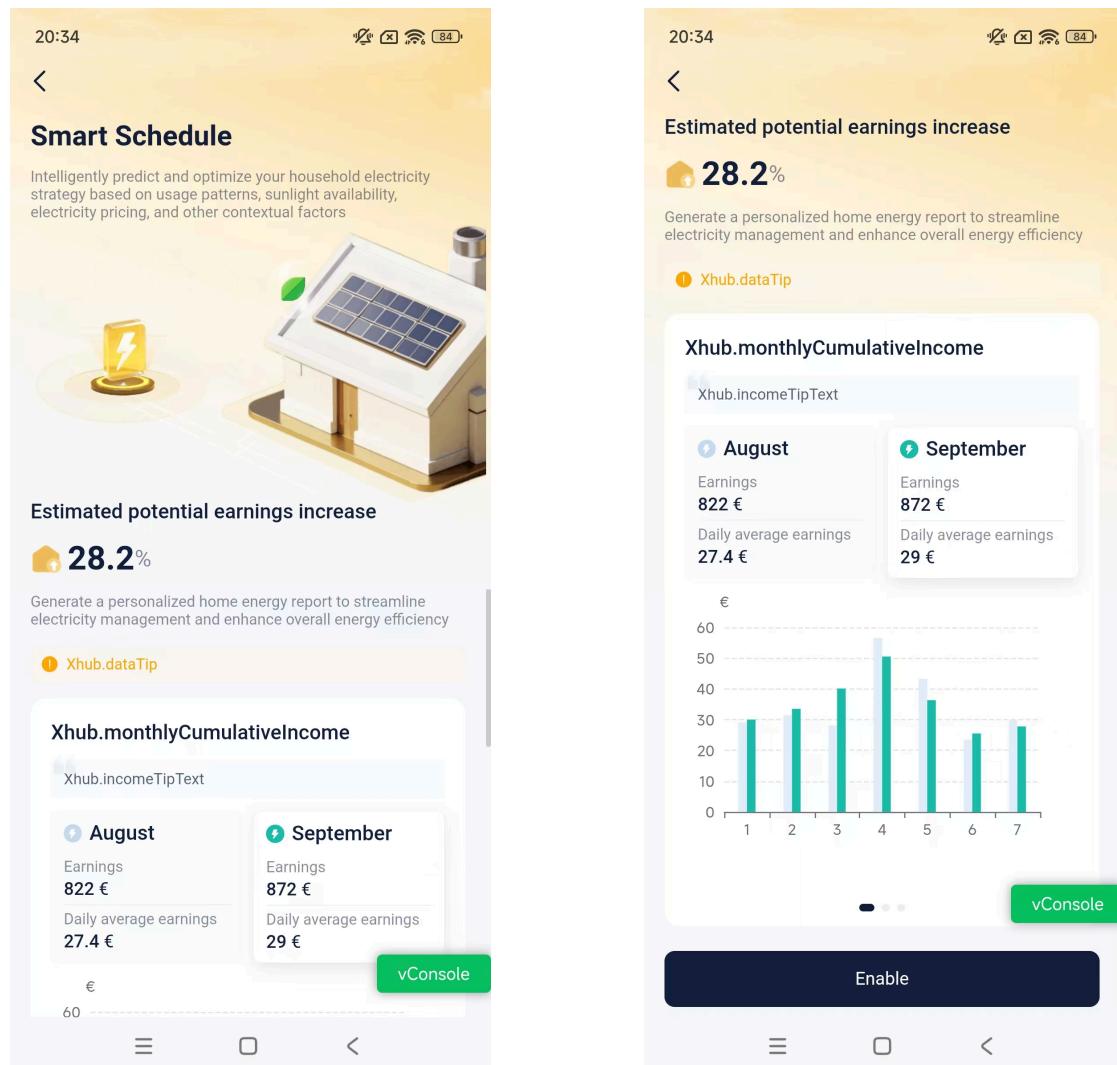


4. The fourth step

Enter your own Plant's PV Capacity on the configuration page

If you are not sure, you can write the PV rated power of the inverter .

Click on "Save" to enable this function

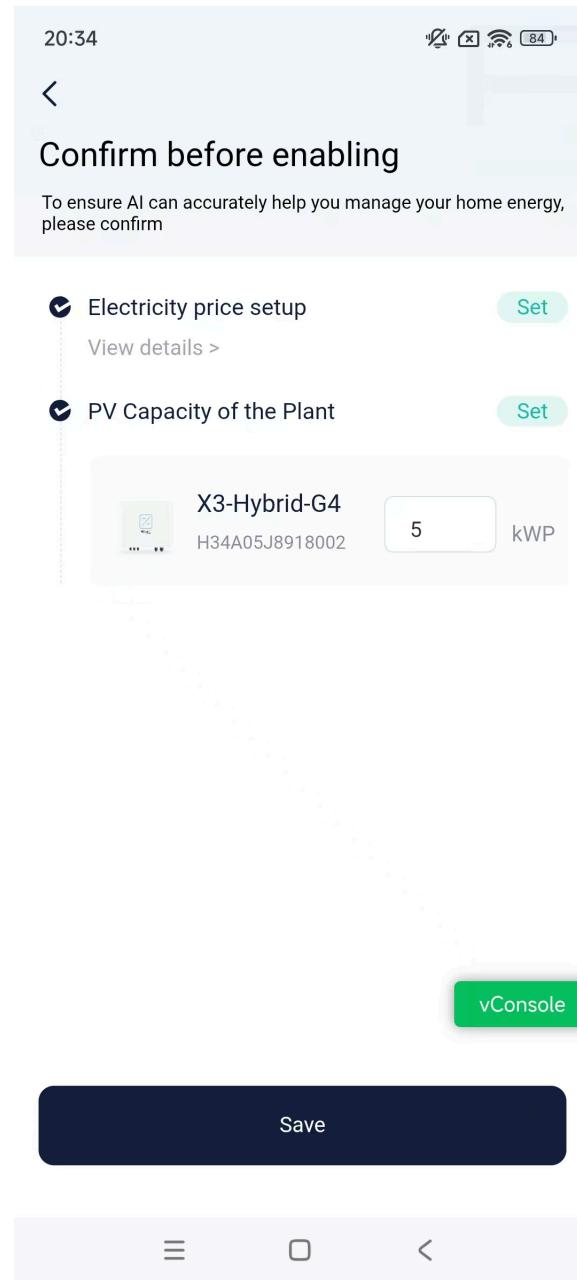

Here is how to disable this function

Follow the arrows indicated.

